

IMPORTANT!

INFLATE BOAT BOW FIRST AND WORK YOUR WAY TO THE REAR.

Correct tube pressure is: 0.2bar (3psi)

**Never use the boat with less than 0.1bar
of tube pressure. This can damage the
tube and will void the warranty.**

DEFLATING.

IF YOU NEED TO DEFLATE THE BOAT, THEN START FROM THE REAR.